

FLAIR

5288804012




User manual
Bedienungsanleitung
Mode d'emploi
Handleiding
Manuale
Manual del usuario
Használati utasítás
Instrukcja obsługi



LUTEC


Incl.

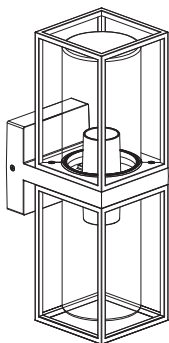


× 4



 × 4








Ø 6mm

 


IP44




INFO:
Art.:
5288804012
220-240V
-50/60Hz

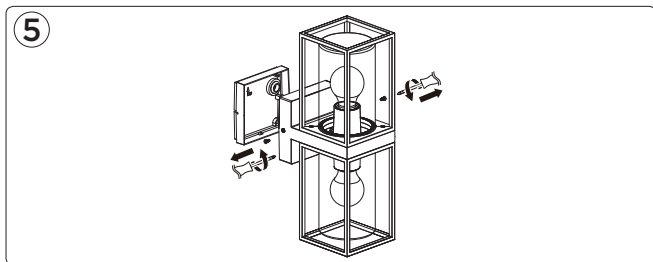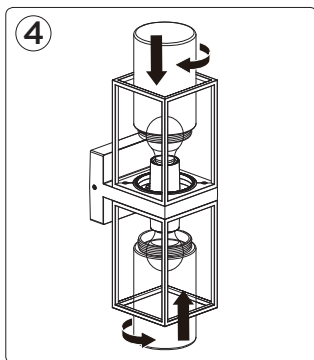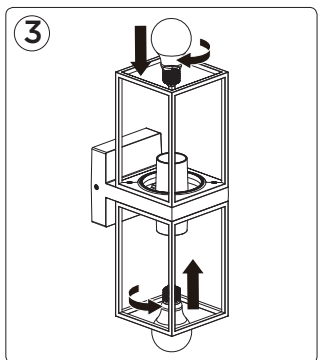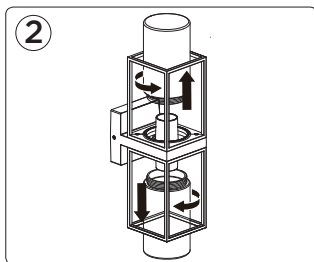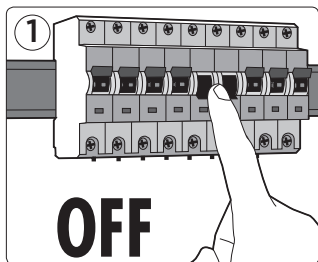


6

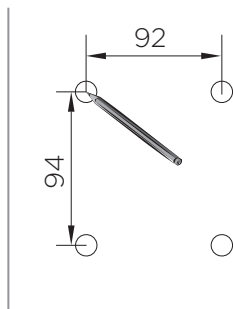


7



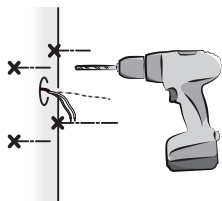


8

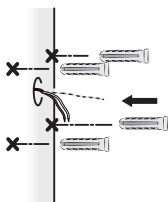


9

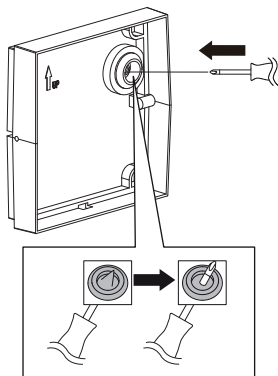

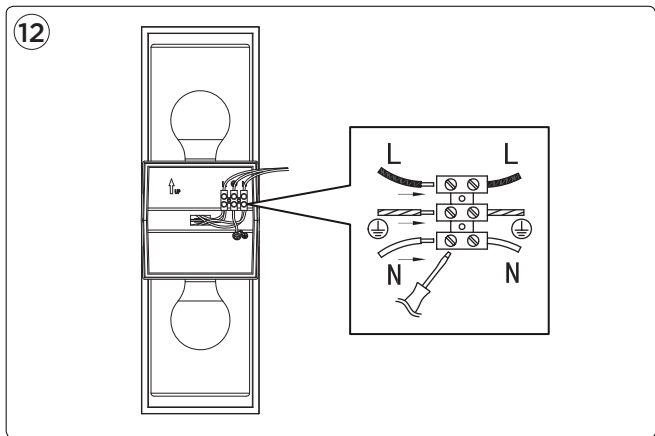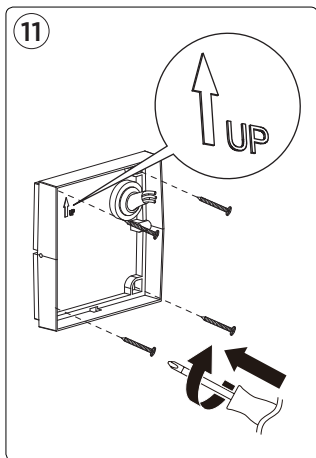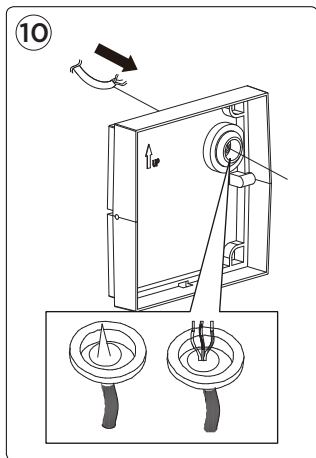

13

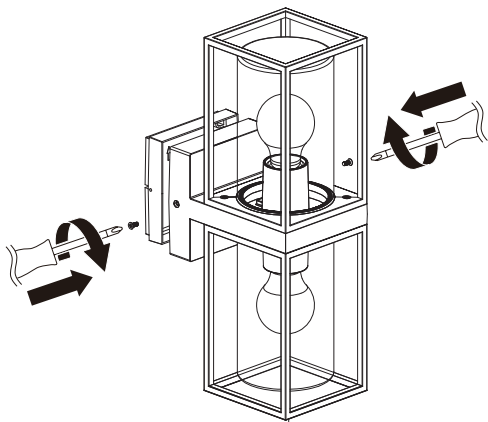



LUTEC Europe NV

Herentalsebaan 425
B-2160 Wommelgem - Belgium
+32 3 284 51 62
info@luteceurope.com
www.lutec.com



www.lutec.com/services/global-network